


ESSENTIA PROGRAMMABLE CONTROL


User Guide

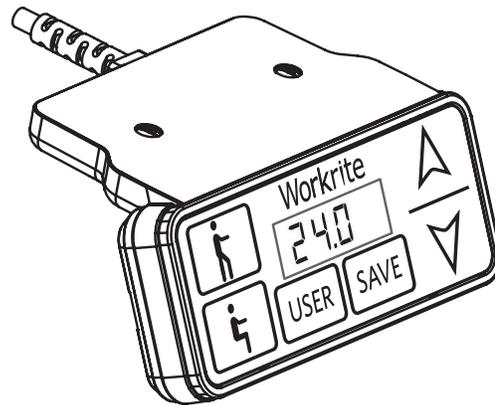

ESSENTIA PROGRAMMABLE CONTROL INTERFACE

The Essentia Programmable Control has a number of features that customize to individual users and work conditions. Please read the instruction completely before you begin.

Note: Functions will time-out if not completed within 10 seconds. If this occurs, start over at Step 1.

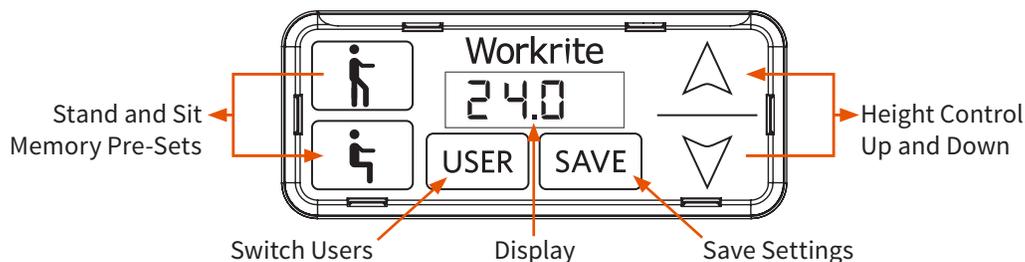

The Essentia Programmable Control has a digital display and six buttons.

THE DIGITAL DISPLAY

The display has four digits. The table height can be shown in inches or centimeters. The display will show the height to within 1/10 of an inch or centimeter. This can be set independently for centimeters and inches.

THE BUTTONS

HEIGHT CONTROL UP AND DOWN

The UP and DOWN buttons are used for moving the table up and down when the user presses the button.

STAND AND SIT MEMORY PRE-SETS

Convenient pre-sets for both standing height and sitting height.

SWITCH USER

The Essentia Programmable Control enables three users to have two memory positions each for a total of six memory pre-sets.

SAVE SETTINGS

Used to commit a setting to memory.

INITIALIZING

INITIALIZING YOUR TABLE

You will need to initialize your table after initial installation or to reset after troubleshooting. Follow these steps to initialize your Essentia Workcenter.

Step	User input	Control indication
1.	Press the DOWN ▼ button until the workcenter reaches the lowest position	Display shows the current height
2.	Press the DOWN ▼ button AGAIN and keep it pressed for about five seconds	22.5
3.	After about five seconds, the workcenter will move lower	22.4 for a fraction of a second
4.	Release the DOWN ▼ button	22.5

The display has been reset and custom user settings are retained.

PROGRAMMING STAND AND SIT MEMORY PRE-SETS

The Essentia Programmable Control enables three users to have two memory positions each, for a total of six memory pre-sets. Programming the pre-sets has three steps:

- Choosing a user
- Saving a memory pre-set height for the chosen user
- Moving to the pre-set height

CHOOSING A USER

Step	User input	Control indication
1.	Press the USER button	Display shows the current user, e.g. U-01, U-02 or U-03
2.	Press the UP ▲ or DOWN ▼ button to choose a user	The 3 users are cycled U-01 → U-02 → U-03 → U-01 → U-02... with the UP ▲ button U-01 → U-03 → U-02 → U-01 → U-03... with the DOWN ▼ button
3.	When the requested user number is shown, press SAVE button	The chosen user number flashes three times, then the current height is shown again

Notes: If no button is pressed for 10 seconds in step 2, the procedure is stopped automatically without changing the user. The current height is shown again. Custom settings will be applied to the user selected in this step. To set custom setting for other users, choose a different user following the steps above.

SAVING A MEMORY PRE-SET HEIGHT

Step	User input	Control indication
1.	Move the table to the desired height	Display shows the current height
2.	Press the SAVE button	Display shows 5 -
3.	Press one of the two memory buttons,  for seated height or  for standing height to store the current height. A double "click" will sound when saved.	U1-1 for User 1 and "Stand" memory pre-set U1-2 for User 1 and "Sit" memory pre-set U2-1 for User 2 and "Stand" memory pre-set U2-2 for User 2 and "Sit" memory pre-set U3-1 for User 3 and "Stand" memory pre-set U3-2 for User 3 and "Sit" memory pre-set The current height will be shown and you will hear two "clicks" to confirm the height has been saved to memory

MOVING TO A PRE-SET HEIGHT

Step	User input	Control indication
1.	Press and hold the desired memory button	Display shows the current height during movement

The desktop will move until it reaches the saved position. If you release the key before the saved position is reached, the desktop will stop and the saved desktop position will not be reached.

CHANGING OR RESETTING THE DISPLAY

CHANGING THE DISPLAY HEIGHT

There may be a need to reset or change the display height setting. If you add casters, for example, your workcenter is about 1.5" higher. If you have a low profile worksurface, then your height might be lower by .5". You will need a tape measure to accurately change the display.

Step	User input	Control indication
1.	Press the DOWN ▼ button until the workcenter reaches the lowest position	Display shows the current height
2.	Measure the height from the floor to the top of your worksurface to get the correct height to be entered in Step 4	
3.	Press the SAVE button	Display shows 5 -
4.	Press the DOWN ▼ button for about five seconds	The display will flash the height
5.	Adjust the display height by press the UP ▲ or DOWN ▼ buttons until you arrive at the correct height noted in Step 1	The display will show the height change but the workcenter will not move
6.	Press the SAVE button	The display is now set to the correct height

The display has been corrected and custom user settings are retained.

RESETTING TO FACTORY SETTINGS

CAUTION! This will reset all settings to factory defaults and erase any custom settings! This procedure is best for resetting a workcenter for new users. If you wish to simply reset the height on the display, consider one of the two procedures above.

Step	User input	Control indication
1.	Press both of the two memory buttons,  and  and the UP ▲ button for about 10 seconds	After 10 seconds the display will show 5 5
2.	Press the UP ▲ button until the display reads 5 0	Display shows 5 0
3.	Press the SAVE button	A double "click" will sound when saved.
4.	Press the DOWN ▼ button until the workcenter reaches the lowest position	22.5

The control has been reset to factory settings and all custom user settings have been erased from memory.

SETTING CUSTOM HEIGHT LIMITS

The custom height limit feature protects the workcenter from colliding with items placed above or below the worksurface such as overhanging shelves or pedestals below. Lower limits are set in the lower half of the workcenter range from 35" or below. Upper limits are set in the upper half of the workcenter range from 36" or above.

SET LOWER LIMIT

Step	User input	Control indication
1.	Press the UP ▲ or DOWN ▼ button to move your workcenter to the desired lower limit (Leave a 1" minimum space between the worksurface and the object below the workcenter for safety)	Display shows the current height during movement
2.	Press the SAVE button for 10 seconds	Display shows 5 - . You will hear two "clicks" to indicate the Lower Limit is set

SET UPPER LIMIT

Step	User input	Control indication
1.	Press the UP ▲ or DOWN ▼ button to move your workcenter to the desired upper limit (Leave a 1" minimum space between the worksurface and the object above the workcenter for safety)	Display shows the current height during movement
2.	Press the SAVE button for 10 seconds	Display shows 5 - . You will hear two "clicks" to indicate the Upper Limit is set

REMOVE LIMITS

Step	User input	Control indication
1.	Press the UP ▲ or DOWN ▼ button to move your workcenter to the either the Lower or Upper limit	Display shows the current height during movement
2.	Press the SAVE button for 10 seconds	You will hear one "click" to indicate the Upper or Lower Limit is removed

LOCK FEATURE

The lock feature disables the workcenter from moving. The Programmable Control needs to be active (the display needs to be showing the current height) for this feature to be activated.

TO LOCK

Step	User input	Control indication
1.	Gently swipe across the bottom of the Programmable Control display, being careful not to press any buttons	A "key" symbol will appear 

TO UNLOCK

Step	User input	Control indication
1.	Gently swipe across the bottom of the Programmable Control display, being careful not to press any buttons	The "key" symbol will disappear 

Press either the Height Control or Memory Preset buttons to confirm the workcenter is unlocked.

CHANGING DISPLAY FROM INCHES TO CENTIMETERS

If you prefer to display the workcenter height in centimeters instead of the default measurement in inches do the following.

Step	User input	Control indication
1.	Press both of the two memory buttons,  and  and the UP▲ button for about 10 seconds	After 10 seconds the display will show 5 5
2.	Press the UP▲ button until the display reads 5 5	Display shows 5 5
2.	Press the SAVE button	Display shows 5 -

The display is now set to centimeters. To switch back to inches from centimeters, repeat the steps above.

TROUBLE SHOOTING ERROR CODES

The Essentia Programmable Control includes a diagnostic code system using the digital readout that allows our service team to easily identify service requirements for your workcenter. In the unlikely event that an error code appears, here's what to do:

The most frequent error codes are **E36**, **E37** and **E38**. This indicates that a motor cable is disconnected from the control box. Check the connections for all cables at the control box to make sure everything is plugged in correctly.

If another error code other than **E36**, **E37** or **E38** appear and the workcenter will not respond to other button pushes to move up or down here is what to do:

Write the code(s) down. Call Workrite Field Service at (800) 959-9675 then press 2 for Technical Support or e-mail to: fieldservice@workriteergo.com

If e-mailing, give full description of error code and complete contact information including phone number and extension so our team may call you back to resolve your error code and get your workcenter up and running.